



INSTRUCTIONS FOR 10'x10' PREMIUM SHELTER

WHAT'S IN THE BOX

(1) 10'x10' Premium Frame, (1) Recreational Grade Top, (1) Roller Bag and (4) Spikes

ONE-TIME TOP INSTALLATION

Unpack and Open

- Place your E-Z UP® frame in the center of the area to be sheltered.
- With partner on the opposite side of the frame, grasp two outer legs, lift the frame slightly off the ground, and step backwards while pulling the frame to open. Stop when the frame is approximately 3/4 of its fully-opened size. (Fig. A)
- Set the frame back on the ground.

Attach Fabric Top

- Gently unfold the fabric top, and place it over the semi-opened frame.
- Attach the fabric top to the E-Z UP® frame by matching the **hook and loop strips** on the inside of the fabric top corners with the hook and loop strips on each frame corner. (Fig. B)
- Pull the fabric top down over the frame corners — pushing the **hook and loop strips** firmly together.

SET UP

Open E-Z UP® Shelter

- With a partner on the opposite side, grasp the bottom of the diamond-shaped area of **outer trusses**. (Fig. C)
- Lift the frame up slightly and step backwards until the shelter is almost fully opened. Gently shake the shelter while opening.

Be careful not to pinch fingers!

Secure Auto-Slider® Pull Pin

- Fold up the fabric top corner to expose the **Auto-Slider® Pull Pin**. (Fig. D)
- Lift shelter corner slightly off the ground and engage the **Auto-Slider® Pull Pin** by pushing up on the frame side trusses with one hand while holding down the top of the frame leg with the other hand. The pins will auto-engage when aligned with the holes on the frame legs.
- After the **Auto-Slider® Pull Pin** has locked into place, pull the fabric top down over the frame leg, making sure to align and secure the hook and loop strips on the fabric top to the frame.
- Repeat on all remaining corners.

Extend & Secure Frame Legs

- With a partner, lift the two adjacent **outer legs** up off the ground simultaneously to about waist height.
- Slide the **lower/inner legs** out until the leg adjustment toggle buttons lock at selected height on each leg. **Note:** There are 3 adjustment settings on each leg. (Fig. E)
- Repeat on the remaining legs.

Note: It is recommended that you use genuine E-Z UP® Deluxe Weight Bags and/or Heavy-Duty Stake Kits to secure your shelter.

Your E-Z UP® shelter setup is now complete!

Fig. A



Fig. B

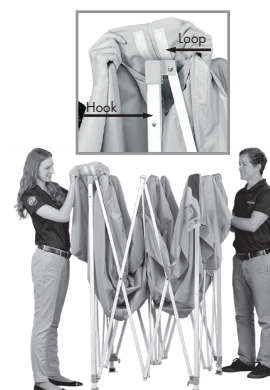


Fig. C

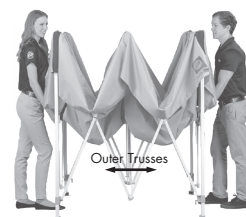


Fig. D


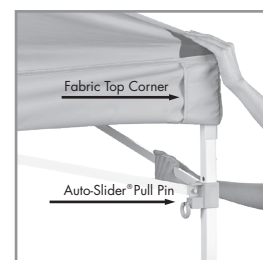


Fig. E



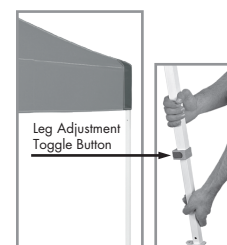


INSTRUCTIONS FOR 10'x10' PREMIUM SHELTER

TAKEDOWN

Collapse Shelter Legs

- With a partner, slightly lift two adjacent corner legs simultaneously.
- Depress the **toggle button** and slide lower/inner legs into upper/outer legs, making sure to do two legs at a time on the same side. (Fig. F)
- Repeat on remaining legs.
Note: Keep the toggle button depressed while retracting leg.

Fig. F

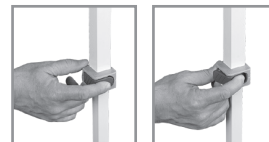

Release Auto-Slider® Pull Pin

- With one hand, slightly push up on the truss near the **Auto-Slider® Pull Pin** to relieve pressure. (Fig. G)
- With the other hand, release the **Auto-Slider® Pull Pin** by pulling the ring.
- Repeat on remaining legs.

Fig. G



Closing Shelter

- Grasp the **frame** on the top of the diamond-shaped area of **center trusses** on the opposite sides near the "CLOSE HERE" sticker. (Fig. H)
- Lift the shelter up slightly, and shake it while stepping toward your partner until the shelter is approximately ½ closed.
Be careful not to pinch fingers!
- Grasp the two outer legs, and push the frame together until it is fully closed.
- Store the shelter in the roller bag provided.
Note: Hug your shelter before placing it in the cover bag.

Fig. H



ROLLER BAG

One-Time Assembly

Use the Roller Bag to store and transport your Instant Shelter® and Spike Kit.

- Slide **Axle** through **Roller Bag Receiver**. (Fig. I)
- Slide the two **Wheel Spacers** onto each side of **Axle** (one on each side).
- Slide one **Wheel** onto each side of the **Axle**.
- Push **Snap Clip** over **Wheel Axle end** (against **Wheel**). (Fig. J)
Your Roller Bag is ready to use!

Fig. I


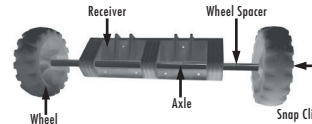


Fig. J

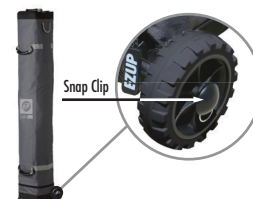

CARE AND MAINTENANCE

For long lasting durability and the best possible protection for your E-Z UP® Instant Shelter® products, follow these E-Z care and maintenance instructions:

- Use a mild soap (not detergent) and plenty of water for the top cleaning.
- Let the E-Z UP® top and frame dry completely before closing or storing to avoid mildew.
- Frame will operate and look better if occasionally treated with silicone spray, especially before and after use in damp conditions. Remove excess silicone residue before applying top.
- Use a seam sealer (available at most sporting goods and hardware stores) if top leaks or drips water.
- Slightly tighten bolts if frame becomes loose.

REPLACEMENT PARTS

For all shelter sizes: 800-45-SHADE ezip.com/parts

WARRANTY INFORMATION

www.ezip.com/warranties

CONDITIONS

This warranty shall be void as to any product that has been altered or modified in any manner. This warranty does not apply to damages caused by wind, rain, or other forces of nature, not to accidental or deliberate damage of the product, nor to the use of the product that does not conform with the product instructions. This warranty is provided in lieu of all other warranties, expressed or implied.

IMPORTANT INFORMATION

READ THIS INFORMATION BEFORE PROCEEDING. IT IS THE USER'S RESPONSIBILITY TO TAKE THE FOLLOWING PRECAUTIONS AT ALL TIMES.

- Always stake or weigh down your E-Z UP® Instant Shelter® product with genuine E-Z UP® accessories. Do not use in any potentially windy or rainy weather.
- Wind and rain can damage the E-Z UP® Instant Shelter® product and also may result in injury to you or others. Therefore, do not rely on your shelter for protection in heavy or prolonged rain storms.
- The E-Z UP® Instant Shelter® product is designed as a temporary shelter. Do not leave up for extended periods.
- Use caution when handling the E-Z UP® folding frame.
- Avoid pinching hands or fingers as frame opens or closes.
- Do not use shelter in a lightning storm.
- Do not leave your E-Z UP® Instant Shelter® product unattended.
- Do not build fires within shelter enclosure.

WARNING: Keep all flame and heat sources away from all Instant Shelter® fabrics and accessories. These fabrics meet the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the fabric may render the flame-resistant properties ineffective.

© Copyright 2022 International E-Z UP, Inc. USA. All rights reserved.

INTERNATIONAL E-Z UP, INC.
1900 Second St., Norco, California 92860

800-45-SHADE

The #1 Instant Shelter® Brand in the World

ezip.com